

# Ucom PU300WB Windows Installation

## Driver installation

- Click on the link below, and find ucom\_pu300wb\_drivers.zip and click to Download.
- [Ucom PU300WB Drivers](#)

### Ucom PU300WB

Unit Price: HKD1,988

Website: <http://vic.hk/products/PO-PUM300WB/default.asp>

Reference: [po-pum300wb\\_catalog.pdf](#)

Manual: [po-pum300\\_usermanual.pdf](#)

Drivers: [ucum\\_pu300wb\\_drivers.zip](#)

[UCom PU300WB Windows installation](#)

- After downloading, open the folder, find RPP300Setup.exe, and double-click to download.
- Then install according to the installation instructions.
- When jump out the message box “RPF300 Printer was created successfully”, The RPF300 printer driver is successfully installed.




## Virtual COM port installation

- After successful download, you will find the RPF300 printer in **Settings → Printers and Scanners**



- Click RPF300 Printer, select **Manage**, and then select **Printer Properties**.
- Find Port in the menu bar and click Enter.
- Click Add Port and click OK

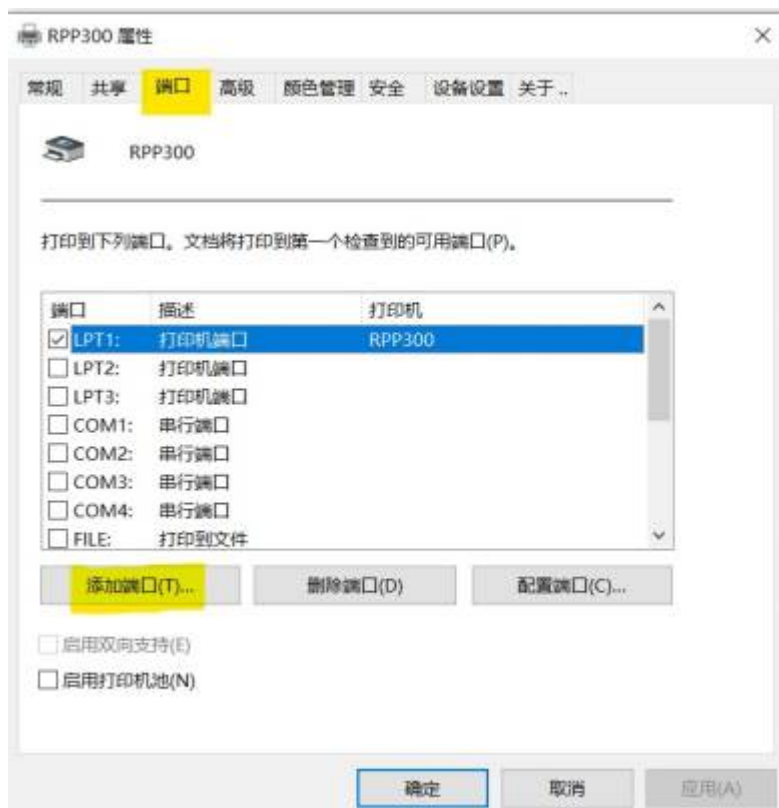

- Select Standard TCP/IP Port in the jump out message box to add port.
- Then enter the port that the printer needs to use.

添加标准 TCP/IP 打印机端口向导

添加端口  
你想为哪一设备添加端口?

输入打印机名或 IP 地址, 以及设备的端口名。

打印机名或 IP 地址(A): 192.168.2.232

端口名(P): 192.168.2.232

< 上一步(B) 下一页(N) > 取消

- Select Standard Default for the device type, click next page.

添加标准 TCP/IP 打印机端口向导

需要额外端口信息  
不能识别设备。

网络上没有找到设备。请确定:

1. 设备已打开。
2. 网络已连上。
3. 设备配置正确。
4. 前一页上的地址正确。

如果你认为地址不正确, 请单击“上一步”返回到上一页, 然后改正地址并在网络上执行另一次搜索。如果你认为地址是正确的, 请选择下面的设备类型。


设备类型

☒ 标准(S) Generic Network Card

☐ 自定义(C) 设置(D)...

< 上一步(B) 下一页(N) > 取消

- Then you can see the basic information of the new port, check that if there are no problems, and then click **Finish**.
- You will see that the available ports contain the new port we just set up, tick it and apply.

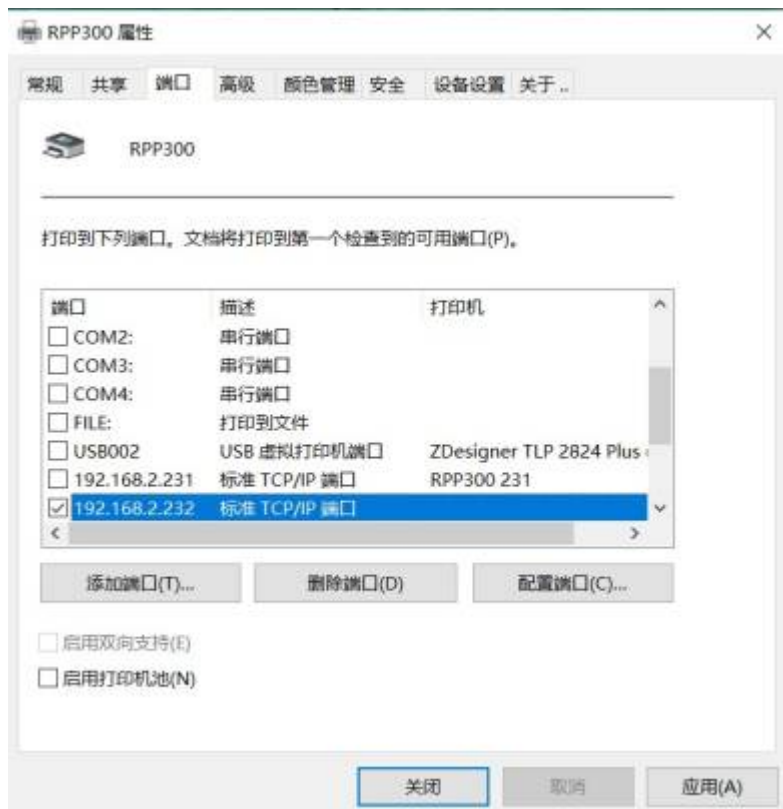


- You can modify the name of the printer in **General**, like **RPP300 232**
- If you have two RPP300 printers and want to install them on the same computer, you need to reinstall the print driver and follow the steps above to set up a new port for the new printer.
- Don't forget to find **Advanced** in the menu bar of the **printer properties**, and select the same RPP300 print driver for both printers. This will ensure that what they print out is the same.



# Wifi setup

## Install Prolific\_Driver

- This printer needs to be connected by using WiFi, so we need to configure the IP and Port for it.
- First of all, We need to open the USB Virtual Com Driver folder, find PL2303\_Prolific\_GPS\_1013\_20090319.exe, double-click to install.
- After the installation is successful, please restart the computer.
- Then we need to use a USB cable to connect the printer and the computer.
- Open the Device Manager
  - Settings → System → About → Device Manager **OR** Enter “Computer Management” in the search box in the lower left corner and open it.
- Click **Port**. If it shows like the image above, it shows like: PL2303HXA PHASED... , please unplug and reconnect the USB cable, until it shows like the image below.
- Please make a note of the COM number in parentheses(like the image below, please make a note of COM3), We'll use that in the later step.

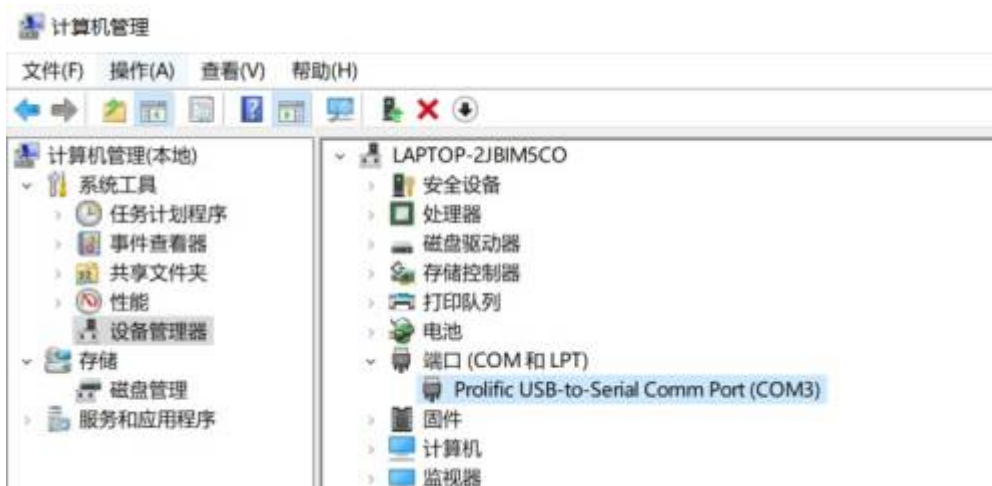

If there are more than ONE Prolific driver have been installed, choose “Prolific USB-to-Serial Comm Port Version: 3.3.2.105 [27/10/2008]”. Newer version may NOT work properly.

## Set WIFI and printer's IP

- Open the WiFi Tools folder, find WifiTool.exe, double-click to start it.
- Please fill in the highlighted sections like the image below. For the Port, select the port that you noted earlier.
- when you click **SET**, you will find the printer print three lines. That means you set the wifi successfully.

无线参数设置

WIFI | IP | MAC

SSID: questgz

☐ 不开启无线安全

☒ WPA-PSK/WPA2-PSK

认证类型: WPA-PSK 加密算法: TPK

PSK密码: questworkgz

☐ WEP

认证类型: 开放系统 密钥:

端口: COM3 波特率: 9600 设置

- Click **IP** in the menu bar to set the printer's IP. Don't forget to choose the right port.

无线参数设置

WIFI | IP | MAC

IP: 192.168.2.232

端口: COM3 波特率: 9600 设置

From: <https://wiki.questwork.com/> - Questwork's Wiki

Permanent link: [https://wiki.questwork.com/doku.php?id=course:congress\\_setup:logistics:ucom\\_pu300wb\\_windows\\_installation:start](https://wiki.questwork.com/doku.php?id=course:congress_setup:logistics:ucom_pu300wb_windows_installation:start)

Last update: 2025/10/19 16:08

